# **AUTOMATIC ACTUATION** PRIMARY SCALE **ADJUSTING** RING TWO UNITS **GRADUATION SCALE**

## **OPERATION MANUAL**









the expected torque number,


release the adjusting ring.

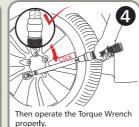

## TIPS FOR EPT TORQUE WRENCH

  
#### **FEATURES**








### NOTE

 



 

you operate.