


MZ-20 Balancer

Rev 1.0

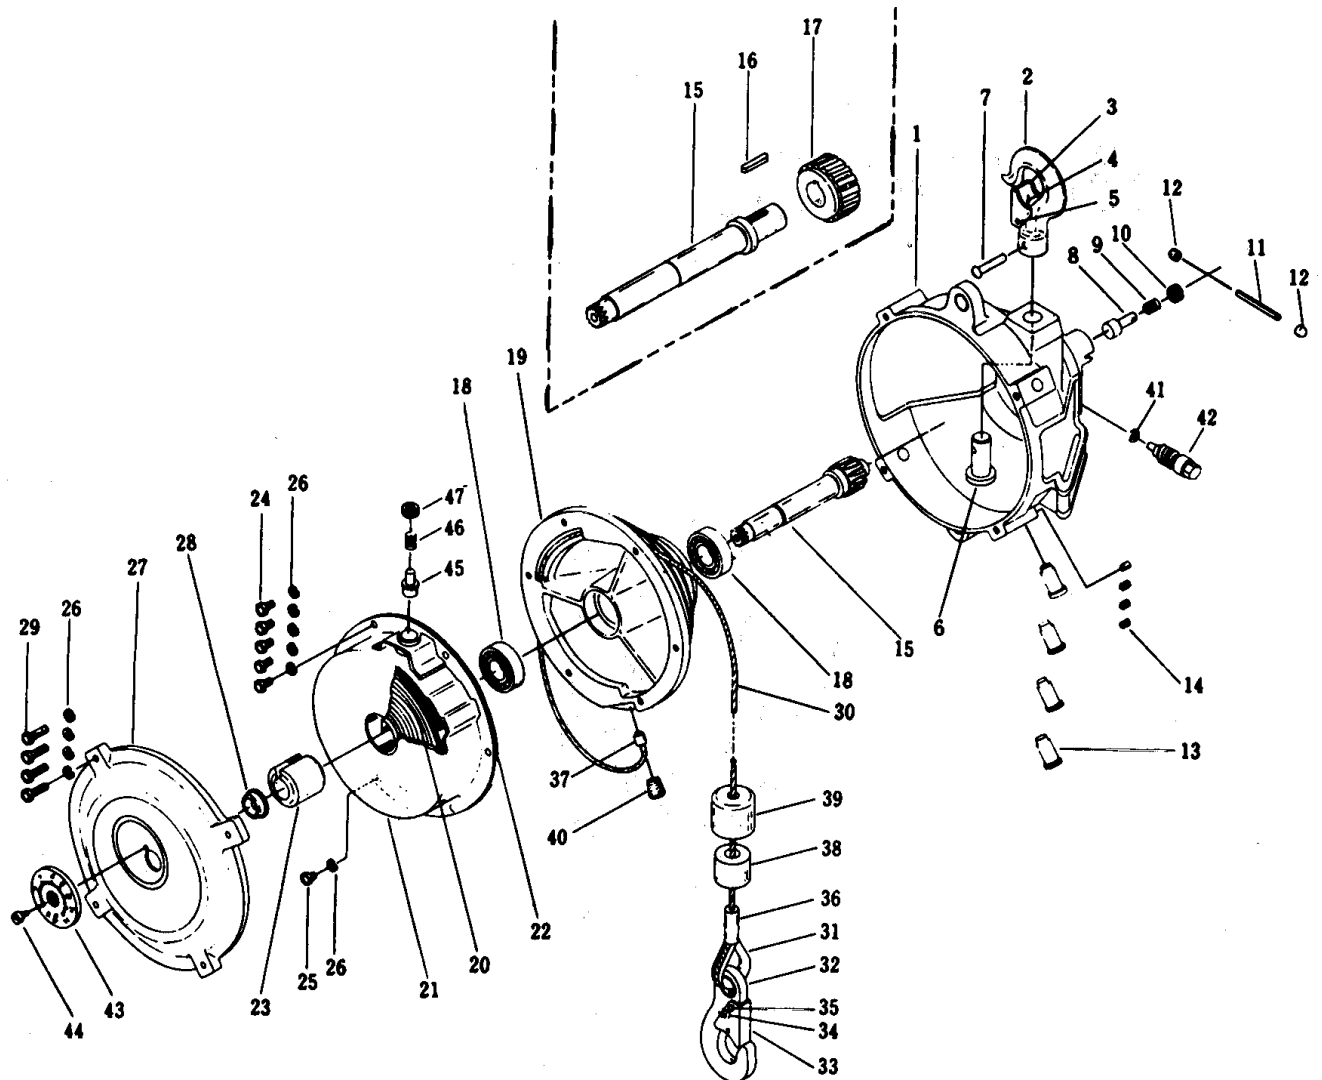

MZ-20 Balancer

<u>Ref#</u>	<u>Part Name</u>	<u>Part#</u>	<u>Ref#</u>	<u>Part Name</u>	<u>Part#</u>
1	Case	18-9001	29	Hex Bolt	18-SH520
	Main Hanger Set (Items 2-5)	18-9021		Cable Set (Items 30-37)	18-9040
2	Main Hanger	-	30	Cable	-
3	Latch	-	31	Thimble	-
4	Latch Spring	-	32	Load Hook	-
5	Round Rivet	-	33	Load Hook Latch	-
6	Main Hanger Shaft	18-9019	34	Load Hook Latch Spring	-
7	Main Hanger Rivet	18-RR525	35	Round Rivet	-
8	Stopper Pin	18-9018	36	Lock (A)	-
9	Stopper Spring	18-9016	37	Lock (B)	-
10	Stopper Pin Holder	18-9015	38	Collar	18-9045
11	Stop Ring Pin	18-PS535	39	Shock Absorber	18-9046
12	Cap	18-9049	40	Cable Set-Bolt	18-PH1/8
13	Safety Arm	18-9014	41	Thrust Washer	18-9012
14	Hex Cap Screw	18-SH512	42	Worm	18-9010
15	Spindle	18-9009	43	Gage	18-9039
16	Key	Unnecessary	44	Gage Screw	18-9038
17	Worm Wheel	Unnecessary	45	Safety Device Pin	18-9017
18	Ball Bearing	Unnecessary	46	Safety Device Spring	18-9016
19	Drum	18-9003	47	Safety Device Spring Screw	18-9015
	Spiral Spring Set (Items 20-22)	18-9008			
20	Spiral Spring	-			
21	Spring Case	-			
22	Spring Case Cover	-			
23	Bushing	18-9011			
24	Hex Bolt	18-SH510			
25	Hex Bolt	Unnecessary			
26	Spring Washer	18-WS52			
27	Spring Cover	18-9002			
28	Casing Cover Bushing	18-9013			