


BL2000 ESD

Version 1.1

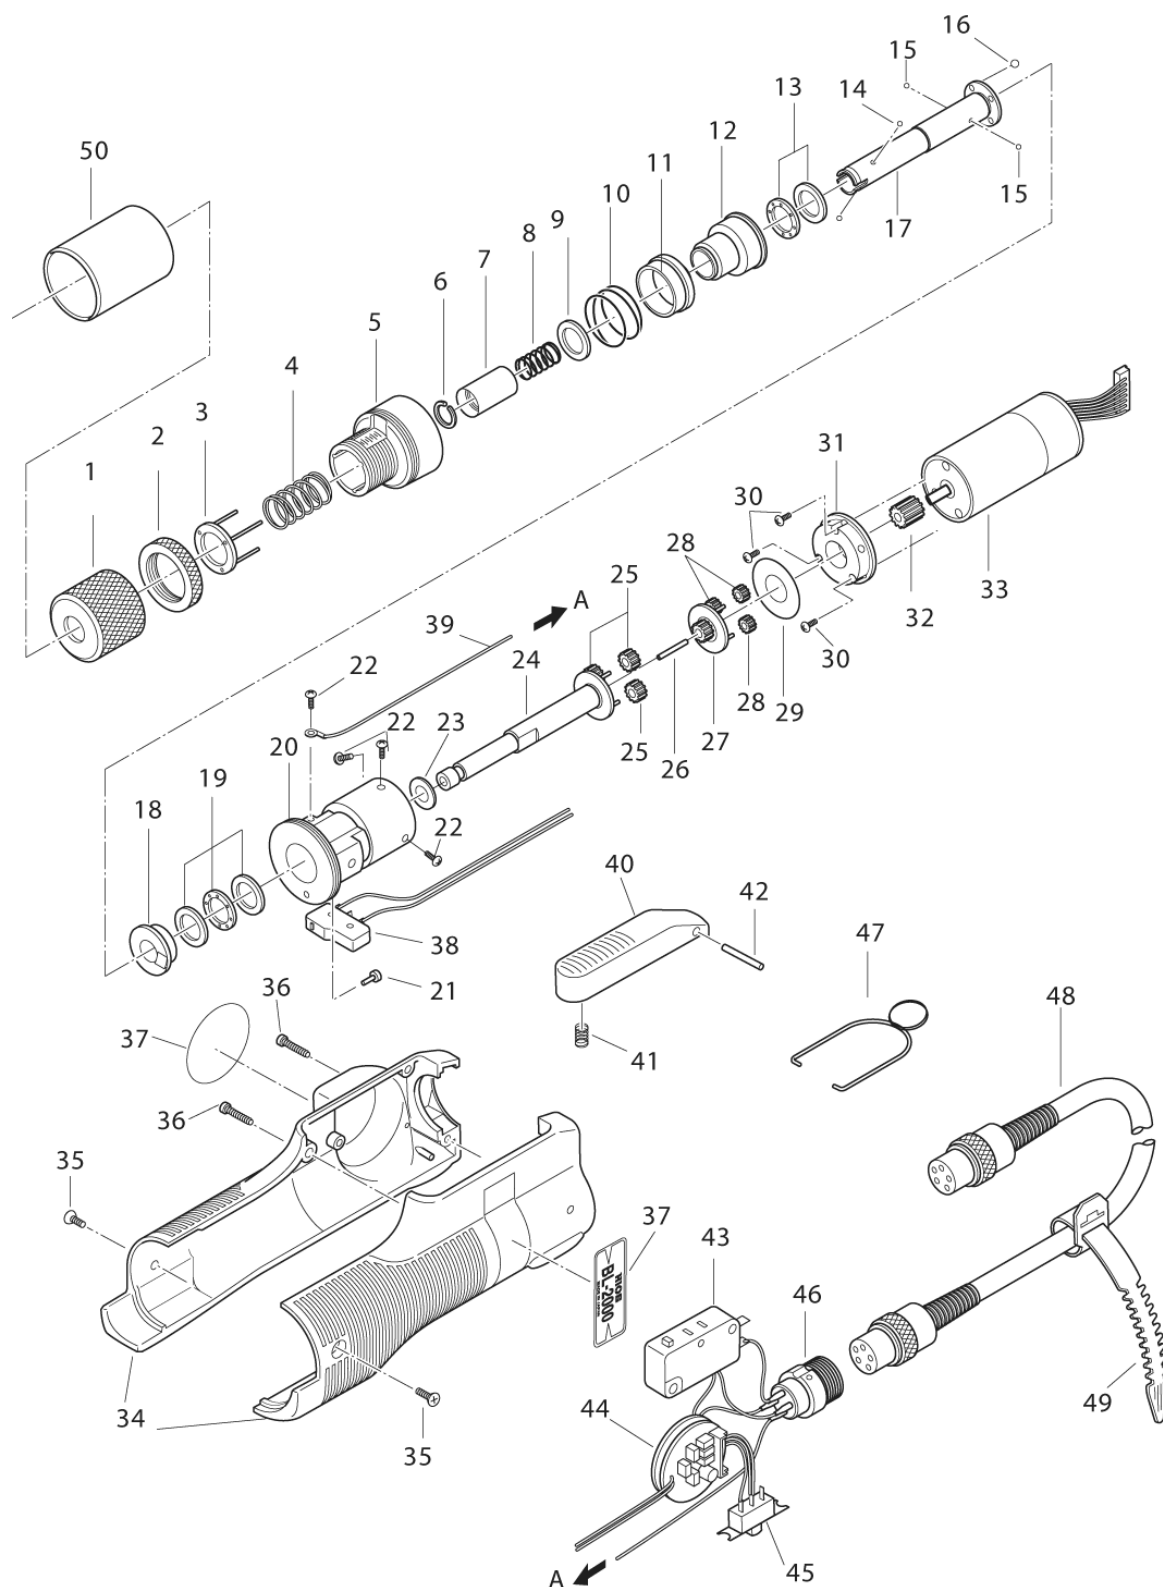

BL2000 ESD

No.	Part Number	Description	Qty.
1	41-CL21-0040	Torque Adjusting Nut(CL-202/CL-203)	1
2	41-BL2-0020	Nut Fixing Ring(CL-203)	1
3	41-CL2-0010	Torque Adjusting Spring Holder A	1
4	41-CL2-0050-2	Torque Adjusting Spring (Black)	1
5	41-CL21-0070	Torque Adjusting Bolt(CL-202/CL-203)	1
6	41-CL2-0100	Collar Stopper	1
7	41-CL2-0110	Joint Shaft Collar	1
8	41-CL2-0120	Joint Shaft Collar Spring	1
9	41-CL2-0130	Washer 6.5x8.5x0.5	1
11	41-CL2-0151	Clutch Panel B(CL-202/CL-203)	1
12	41-CL2-0171	Clutch Panel A(CL-202/CL-203)	1
13	41-CL2-0190	Thrust Bearing T-1370T1	1
14	41-BALL-015	Steel Ball 1.5mm	1
15	41-BALL-02	Steel Ball 2.0mm	1
16	41-BALL-0317	Steel Ball 3.17mm	2
17	41-CL2-0210	Joint Shaft	1
18	41-CL2-0231	Cam	1
19	41-A45-0170	Thrust Bearing 6x11	3
20	41-CL21-0270	Gear Case Assembly(CL-202/CL-203)	1
21	41-CL2-0250	Limit Pin	1
22	41-SPC20X040	Set Screw 2.0x4 (STP20X040)	3
23	41-CL2-0700-15	Washer 6.1x10.5x0.15(CL-203)	1
24	41-CL2-0280	Lower Planet Cage	1
25	41-CL2-0290	Planet Gear	2
26	41-CL65PS-0150	Joint Shaft Lock Pin 2x9.8	1
27	41-BL2-0320	Upper Planet Cage	1
28	41-BL2-0290	PLANET GEAR	3
29	41-BL2-0330	Oil Seal	1
30	41-SPC20X040	Set Screw 2.0x4 (STP20X040)	2
31	41-BL2-0340	Motor Front Panel	1
33	41-BL3-0362	Motor Assy (W/Pinion Gear)	1
34	41-BL2-0380	Body Case A&B	1
35	41-MYFF26060NITP	SET SCREW 2.6 x 6	2
36	41-B0HD5F35120NITP	Set Screw 3.5X12	2
37	41-BL2-0470	Name Plate	1
40	41-BL2-0410	Switch Lever	1
41	41-CL2C-0430	Switch Lever Spring (CL-203)	1
42	41-VZ18-0580	Lever Shaft 2X18.8	1
	41-BL2-CC1	Circuit Assy (BL-2000)	1
47	41-CL4-0594	CL4-0592 Hanger	1
48	41-CL4-0610ESD	5-Core Cord W/Connectors In Both Ends ESD	1
49	41-CL4-0600	Free-Up Belt	1
50	41-BL2-0010	Torque Adjusting Nut Protect Cover(ESD)	1