


SS2000 Parts List

Rev 1 (4/12/12)

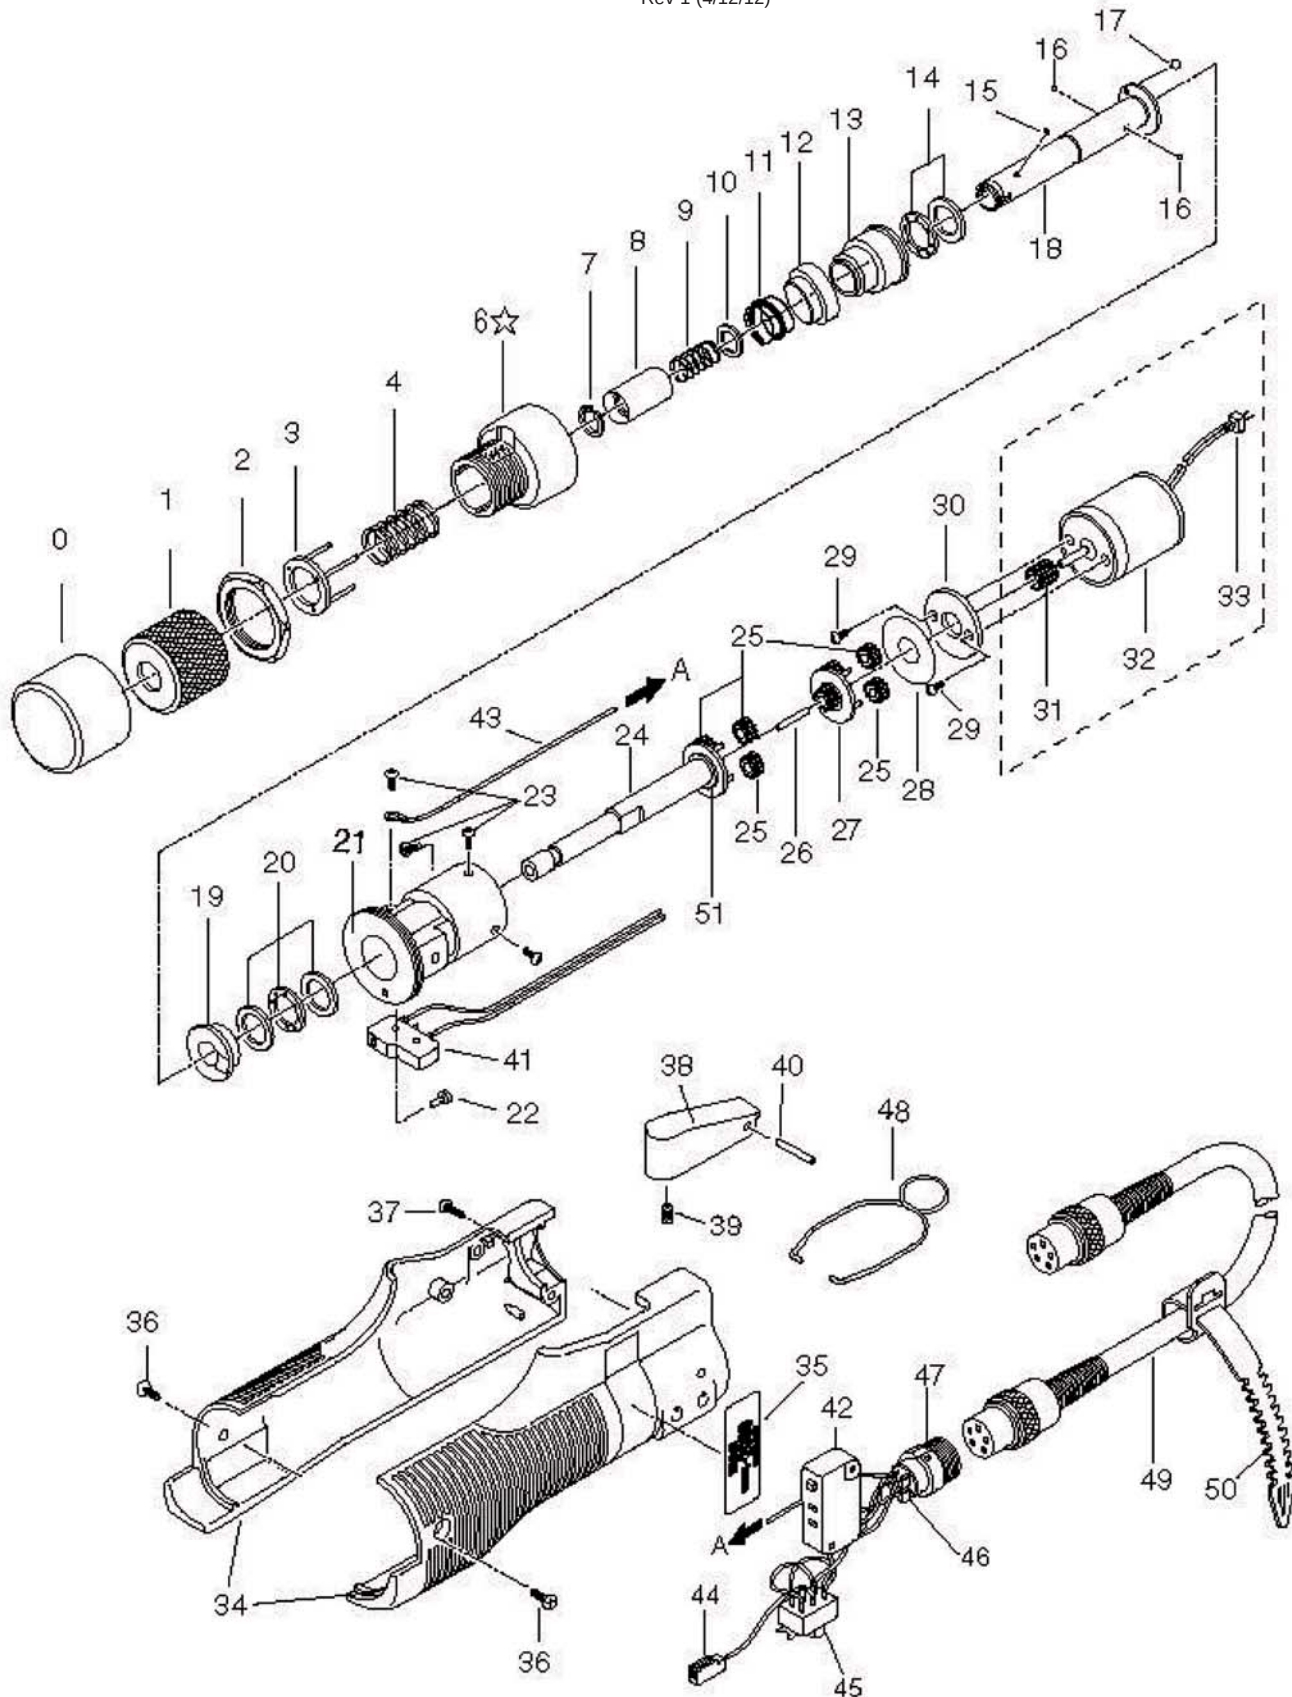

SS2000 Parts List

No.	Part Number	Description	Qty.
0	Torque Adjusting Nut Protect Cover(CL-203)	41-CL2-0001	1
1	Torque Adjusting Nut (CL-201)	41-CL2-0041	1
2	Nut Fixing Ring (CL-201/CL-202)	41-CL2-0020	1
3	Torque Adjusting Spring Holder A	41-CL2-0010	1
4	Torque Adjusting Spring (Black)	41-CL2-0050-2	1
4	Torque Adjusting Spring (Yellow)	41-CL2-0050-1	1
6	Torque Adjusting Bolt(CL-202/CL-203)	41-CL21-0070	1
7	Collar Stopper	41-CL2-0100	1
8	Joint Shaft Collar	41-CL2-0110	1
9	Joint Shaft Collar Spring	41-CL2-0120	1
10	Washer 6.5x8.5x0.5	41-CL2-0130	1
12	Clutch Panel B(CL-202/CL-203)	41-CL2-0151	1
13	Clutch Panel A(CL-202/CL-203)	41-CL2-0171	1
14	Thrust Bearing T-1370T1	41-CL2-0190	1
15	Steel Ball 1.5mm	41-BALL-015	1
16	Steel Ball 2.0mm	41-BALL-02	2
17	Steel Ball 3.17mm	41-BALL-0317	1
18	Joint Shaft	41-SS2-0210	1
19	Cam	41-SS2-0230	1
20	Thrust Bearing 6x11	41-A45-0170	1
21	Gear Case Assembly(CL-202/CL-203)	41-CL21-0270	1
22	Limit Pin	41-CL2-0250	1
23	Set Screw 2.0x4	41-STP20X040	4
24	Lower Planet Cage	41-CL2-0280	1
25	Planet Gear	41-CL2-0290	4
26	Joint Shaft Lock Pin 2x9.8	41-CL65PS-0150	1
27	Upper Planet Cage	41-CL2-0320	1
28	Oil Seal	41-CL2-0330	1
29	Set Screw 2.0x5	41-STP20X050	2
30	Motor Front Panel	41-CL2-0340	1
	Motor Assy31-33	41-CL2-MT	1
34	Body Case A&B (CL-203)	41-CL2C-0380	1
36	Set Screw 2.6x6	41-MSPF26060NIGP	2
37	Set Screw 3.5X12	41-B0HD5F35120NITP	1
38	Switch Lever (CL-203)	41-CL2C-0410	1
39	Switch Lever Spring (CL-203)	41-CL2C-0430	1
40	Steel Shaft 2x17.8	41-ACL20-0550	1
	Circuit Assy (CL-203)41-47	41-CL2C-CC	1
41	Limit Switch	41-CL4-0230	1
42	Starting Switch	41-CL4-0570	1
45	For/Rev Switch	41-CL2-0450	1
46	Condenser 682KG	41-CL3NL-0440	1
47	5 Pin Connector	41-CL2-0440	1
48	CL4-0592*Hanger	41-CL4-0594	1
49	5-Core Cord W/Connectors In Both Ends	41-CL4-0611	1
50	Free-Up Belt	41-CL4-0600	1
51	Washer 6.1x10.5x0.15(CL-203)	41-CL2-0700-15	1