


CL-2000

Rev 1.0

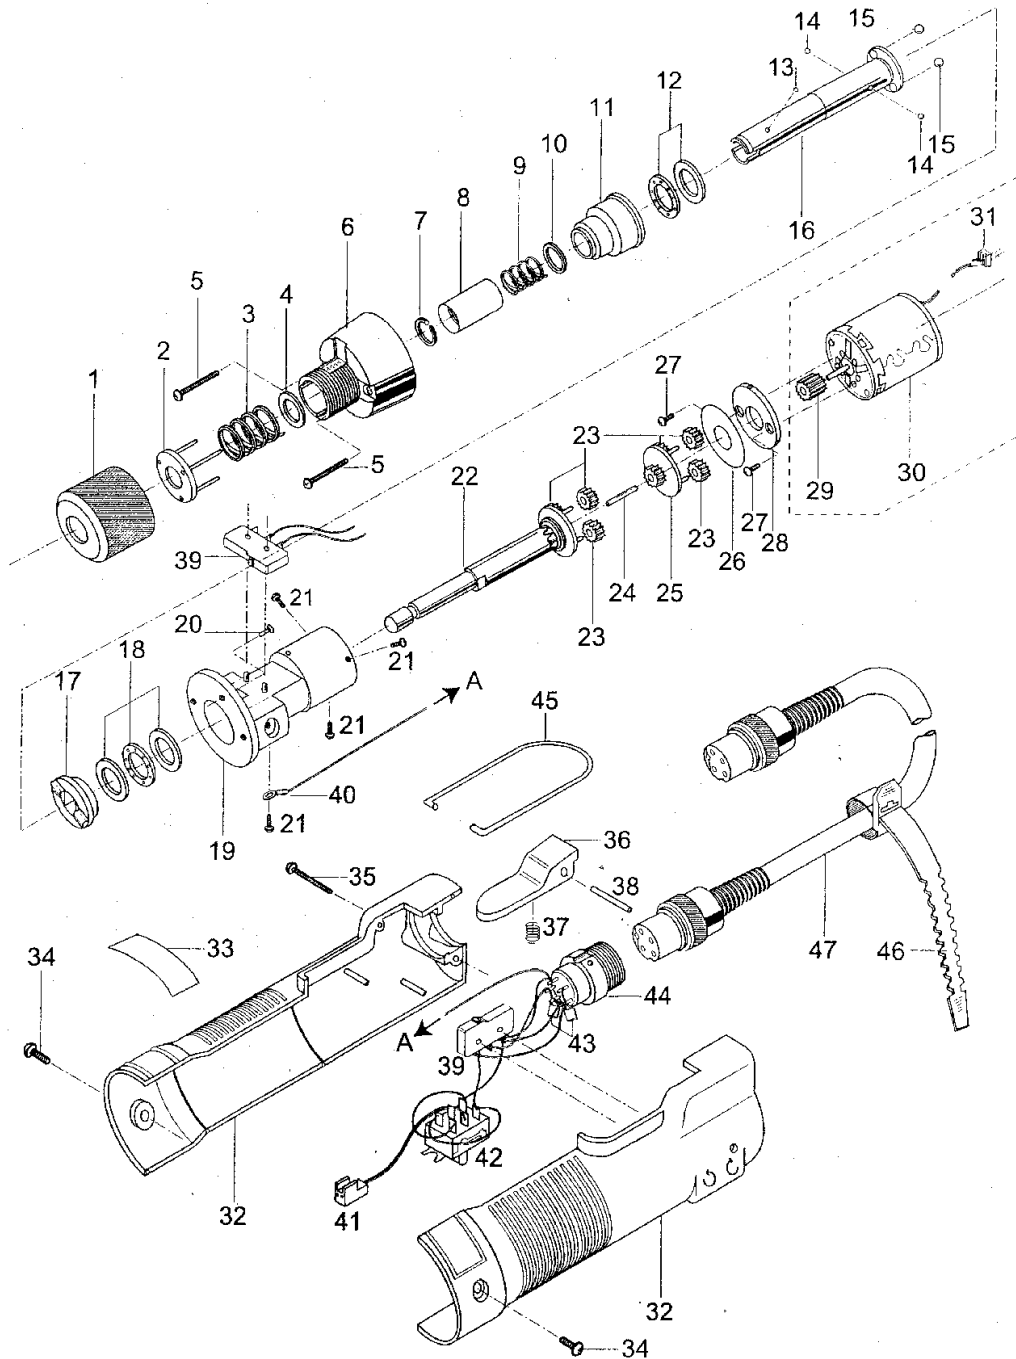



CL-2000

Ref#	Part Name	Part#	Ref#	Part Name	Part#
	Transmission Assembly 1 – 26 (w/o No. 21)	41-CL2-TM		Motor Assembly 29 – 31	41-CL2-MT
1	Torque Adjusting Nut	41-CL2-0040	29	Pinion Gear (include Motor Assy)	-----
2	Torque Adjusting Nut Spring Holder A	41-CL2-0010	30	Motor (include Motor Assy)	-----
3	Torque Adjusting Spring (Black)	41-CL2-0050-2	31	Connector 5045-02A (include Motor Assy)	-----
	Torque Adjusting Spring (Yellow)	41-CL2-0050-1	32	Body Case A & B	41-CL2-0380
4	Spring Holder B	41-CL2-0060	33	Name Plate	41-CL2-0470
5	Set Screw 2.6x15	41-STP26X150	34	Set Screw 2.6x6	41-STP26X060
6	Torque Adjusting Bolt	41-CL2-0070	35	Set Screw 2.6x12	41-STP26X120
7	Collar Stopper	41-CL2-0100	36	Switch Lever	41-CL2-0410
8	Joint Shaft Collar	41-CL2-0110	37	Switch Lever Spring	41-CL2-0430
9	Joint Shaft Collar Spring	41-CL2-0120	38	Steel Shaft 2ø x 17.8	41-ACL20-0550
10	Washer 6.5x8.5x0.5	41-CL2-0130			
11	Clutch Panel	41-CL2-0170		Circuit Assembly 39 – 44	41-CL2-CC
12	Thrust Bearing T-1370T1	41-CL2-0190			
13	Steel Ball 1.5ø	41-BALL-015	39	Limit Switch SS-5-L (165)	41-CL4-0230
14	Steel Ball 2.0ø	41-BALL-02	40	Ground Connector (41-319) (include Circuit Assy)	-----
15	Steel Ball 3.17ø	41-BALL-0317	41	Housing Assy (5051-02) (include Circuit Assy)	-----
16	Joint Shaft	41-CL2-0210	42	For/Rev Switch	41-CL2-0450
17	Cam	41-CL2-0230	43	Film Condenser	41-CL3NL-0440
18	Thrust Bearing T-1160	41-A45-0170	44	5-Pin Connector	41-CL2-0440
19	Gear Case Assembly	41-CL2-0270	45	Hanger	41-CL2-0590
20	Limit Pin	41-CL2-0250	46	Free-Up Belt	41-CL4-0600
21	Set Screw 2x4	41-STP20X040	47	5-Core Cord w/connector in both ends	41-CL4-0611
22	Lower Planet Cage	41-CL2-0280			
23	Planet Gear	41-CL2-0290			
24	Steel Shaft 2ø x 9.8	41-CL65PS-0150			
25	Upper Planet Cage	41-CL2-0320			
26	Oil Seal	41-CL2-0330			
27	Set Screw 2x5	41-STP20X050			
28	Motor Front Panel	41-CL2-0340			

