




EZ-Glider Articulated Torque Arm Operating Instructions

Rev 1.3 (4/26/17)


1. Place the base on a perfectly horizontal working surface and bolt it down (screws not included).



2. Unscrew the 2 "allen" screws along the red cylinder base.
3. Place the "Slide" along the red cylinder base and tighten 2 "allen" screws. You can select any of the hole slots along the "Slide" to mount it. Selecting the different hole slots can increase or decrease the "Slide's" length.

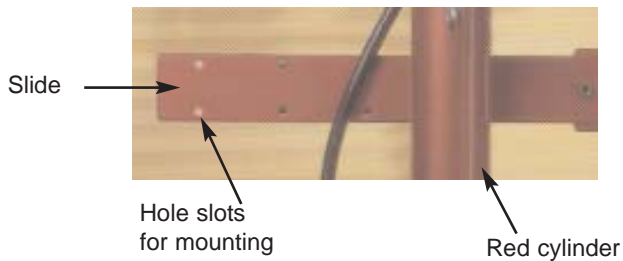


4. Connect the balancer to the "eye bolt"

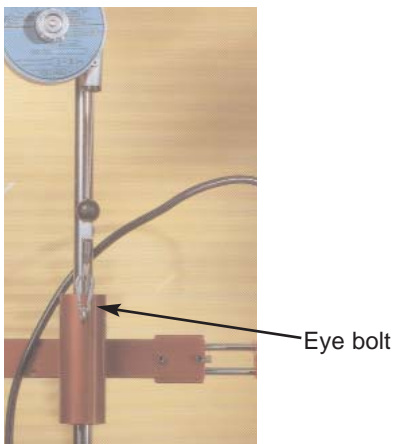

Clamp the tool as following:

5. Unscrew the 2 screws with 4mm "Allen" wrench.
6. Position the tool in the clamp.
7. Tighten the 2 screws until the tool is clamped securely.
8. Adjust the balancer according to weight. Pull knob out on the balancer and turn clockwise to decrease tension and counterclockwise to increase tension.

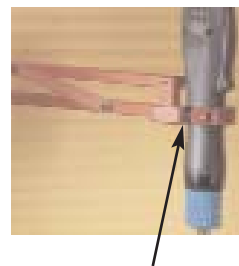

Fasten the the
clamp into the arm



Note: ensure all bolts are tightened during assembly of arm and to periodically check and tighten fasteners as needed as part of regular equipment maintenance program.